



ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D
1		Hair Guard Screw	
1a	04025	Black	2
1b	04654	Gold-Tone	2
2		Hair Guard	
2a	04071	Outliner (CSA)	1
2b	04203	Outliner (UL)	1
2c	04065	T-Outliner (UL)	1
2d	04660	Gold-Tone Hair Guard	1
3		Cover Screw	
3a	04023	Brite zinc	2
3b	04653	Black	2
4	04082	Switch Decal - (Sold with 5b only)	
5		Upper Cover Assembly	
5a	04602	Grey Assembly (UL)(1a, 2b)	1
5b	04623	Grey Assembly (CSA)(1a, 2b, 4)	1
5c	04646	Black Assembly (UL)(1b, 2b)	1
6	04229	Terminal Screw (CSA 3-Wire)	1
7	01296	Lockwasher (CSA 3-Wire)	1
8	01403	Switch Pad Screw	1
9	05032	Field Screw	2
10		Motor Assembly	
10a	S04515	2 Wire-UL (12, 25, 26)	1
10b	S04527	3 Wire-CSA (12,25,26)	1
11			
12	S04508	Field Assembly	1

ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D
13		Cord Set	
13a	04624	2 Wire-UL	1
13b	04617	3-Wire-CSA	1
14			
15		Hanger Hook	
15a	65842	Nickel plated	1
15b	04662	Gold Tone Hanger Hook	1
16		Lower Case	
16a	S04225	Grey	1
16b	04629	Black	1
17		Lower Blade Screw	
17a	26899	Brite Nickel Plate	2
17b	04663	Gold Tone	2
18	04064	Fiber T-Guide	1
19	15886	T-Guide Washer	1
20		T-Guide Screw	
20a	04648	Brite Zinc Plate	2
20b	04655	Gold-Tone	2
21	04022	Field Screw	1
22	04108	Tension Spring Assembly	2
23	32527	New Style Tension Screw (no washer)	2
24	29756	Tension Spring Screw	2
25	04532	Armature Spring Assembly (#26)	1
26	03999	Armature Support Screw	1

### IMPORTANT INFORMATION

When ordering repair parts, include part number, part name and model of trimmer. For best performance, trimmer blades should be CLEANED and OILED with Andis Clipper Oil before and after use. If repair is necessary, return to any Andis Authorized Repair Service Station, or to Andis Company, 1800 Renaissance Blvd., Sturtevant, Wisconsin, 53177 U.S.A.. Pack carefully, mail either Insured Parcel Post, or U.P.S. , attach a letter to outside of package explaining difficulty.